# Bentley 2012 New Continental / GT Manual








# **About Interface**

- Dimension

136mm \* 83mm \* 21mm




- External Appearance

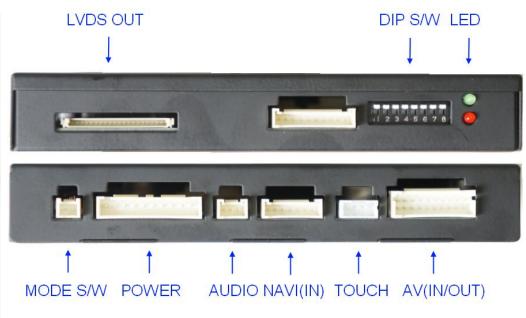

→ This can change under manufacturer's circumstance

# **Connector Pin Assignment**

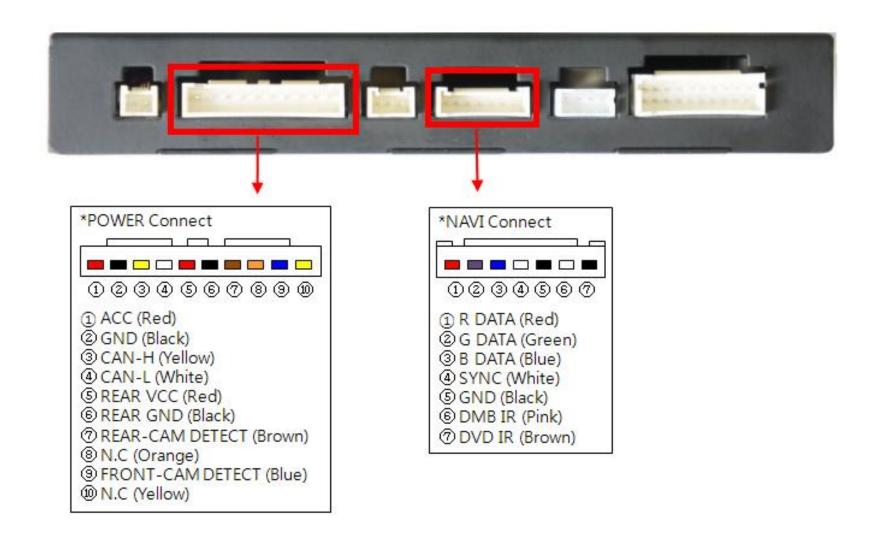

# **Product Composition**



**Interface Board 1 EA** 




**AV Cable1 EA** 



**JIG Board 1 EA** 



LVDS Cable (800mm) 1 EA

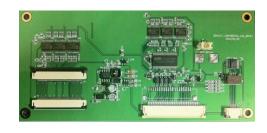

**Sub Board 1 EA** 



**RGB Cable1 EA** 



**OSD Board 1 EA** 



Mode S/W 1 EA



LVDS FPC Cable 1 EA



Power Cable 1 EA



Touch FPC Cable (100mm) 1 EA



**Audio Cable1 EA** 

# **DIP S/W Setting**

 $\ensuremath{\mathbb{X}}$  ON:DOWN,OFF:UP

| PIN | FUNCTION        | DIP S/W Selection                               |
|-----|-----------------|---|
| 1   | NAVI INPUT MUTE | ON : Skipping NAVI Mode<br>OFF : NAVI Display   |
| 2   | AV1 MUTE        | ON: Skipping AV1 OFF: AV1 Display               |
| 3   | AV2 MUTE        | ON: Skipping AV2 OFF: AV2 Display               |
| 4   | Navi Mode       | ON: NAVI-AV Sellection OFF: NAVI-RGB Sellection |
| 5   | N.C             |   |
| 6   | N.C             |   |
| 7   | N.C             |   |
| 8   | N.C             |   |


### **OSD Control**

#### **OSD Control Board**



| MENU | Push -> OSD menu On/Off             |  |  |
|------|-------------------------------------|--|--|
| SEL  | Item Selection, Value Selection     |  |  |
| UP   | Item Up / Increase selected value   |  |  |
| DOWN | Item Down / Decrease selected value |  |  |

Mode State

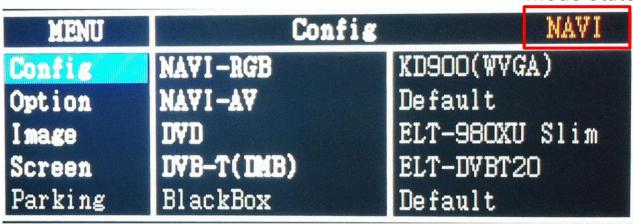

First Menu

Second Menu

Third Menu

# **OSD Control**

| First Menu | Second Menu | Third Menu  | Action                  |
|------------|-------------|-------------|-------------------------|
|            | GPS - RGB   | GI4000      | Selection Korea 480*234 |
|            |             | GI8000      | Selection Korea 800*480 |
|            |             | PT-GPS800HD | Selection China 800*480 |
|            |             | LC260(WVGA) | Selection China 800*480 |
|            |             | KD900(WVGA) | Selection China 800*480 |
| Config     |             | KD900(WVGA) | Selection China 480*234 |
|            | GPS - AV    |             |                         |
|            | DVD         |             |                         |
|            | DVB-T (DTV) |             |                         |
|            | Reset       | Excute      | Config Menu all Reset   |


### **OSD Control**

| First Menu | Second Menu      | Third Menu | Action                                     |  |
|------------|------------------|------------|--|--|
|            | RearCam – Type   | OEM        | Use Original Rear camera                   |  |
|            |                  | Ext-Device | Use aftermarket Rear camera                |  |
|            | RearCam – Power  | On         | Rear camera get +12V consistently          |  |
|            |                  | Auto       | Rear camera get +12V when reverse gear on  |  |
|            |                  | Off        | Shut out the power supply                  |  |
|            | FrontCam - Type  | OEM        | Original Front camera                      |  |
| Option     |                  | Ext-Device | Use aftermarket Front camera               |  |
|            | FrontCam – Power | On         | Front camera get +12V consistently         |  |
|            |                  | Auto       | Front camera get +12V when reverse gear on |  |
|            |                  | Off        | Shut out the power supply                  |  |
|            | DoorCom DayOnt   | On         | Show Frontcam 25sec after rear mode        |  |
|            | RearCam - RcvOpt | Off        | Default                                    |  |
|            | Reset            | Excute     | Option Menu all Reset                      |  |

Rear camera: Don't need to install to back-light.

(Rear camera ACC, GND, Detect wires connect to our power cable. (Wire = 5,6,7)

# **Front Camera**

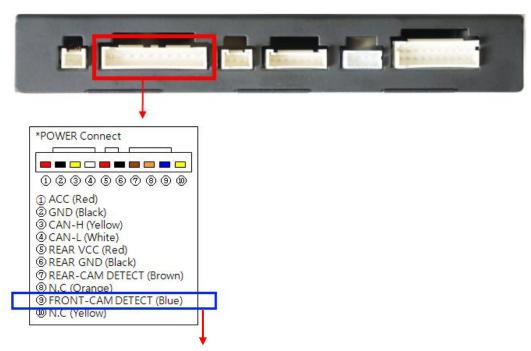

Connect +12V, Front camera work on.

But, Can't work on "Rear camera" mode Work on "OEM, NAVI, AV1, AV2" mode.

"Front" appears for 3 sec When in change mode.



#### 1-1 Monitor Dismantle









Remove the screw

#### 1-2 . Monitor Dismantle

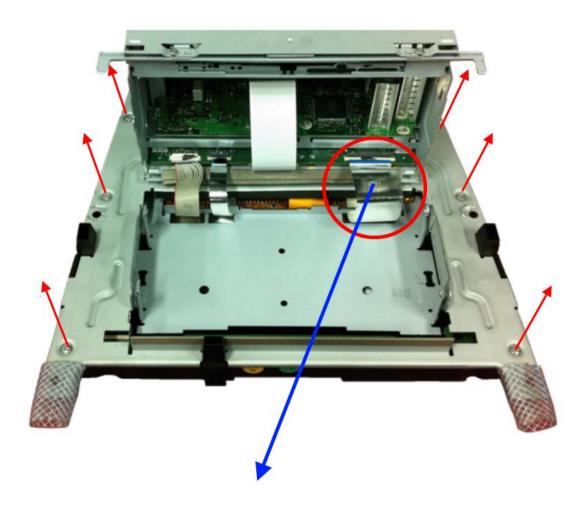


Remove the "Silver color FPC Cable". (Not Use)


#### 1-3 Touch FPC cable connection

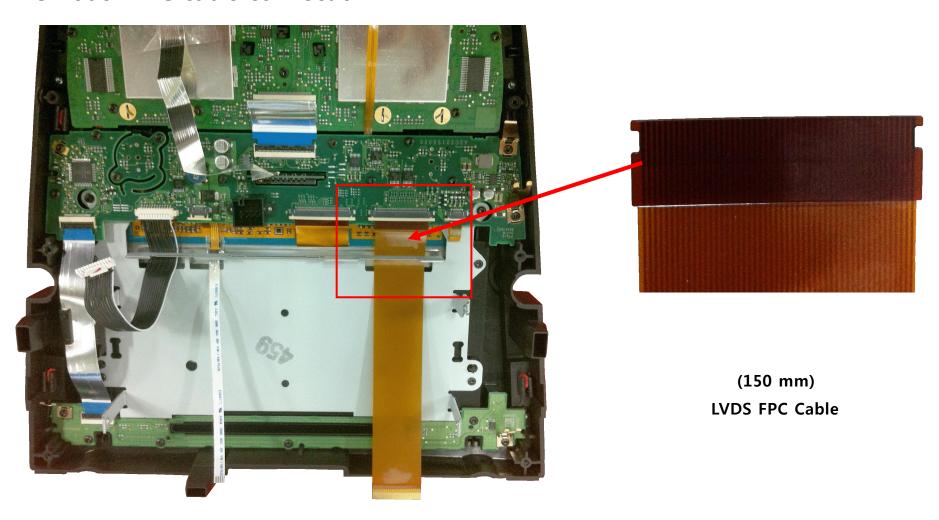


1-4 Touch FPC cable connection

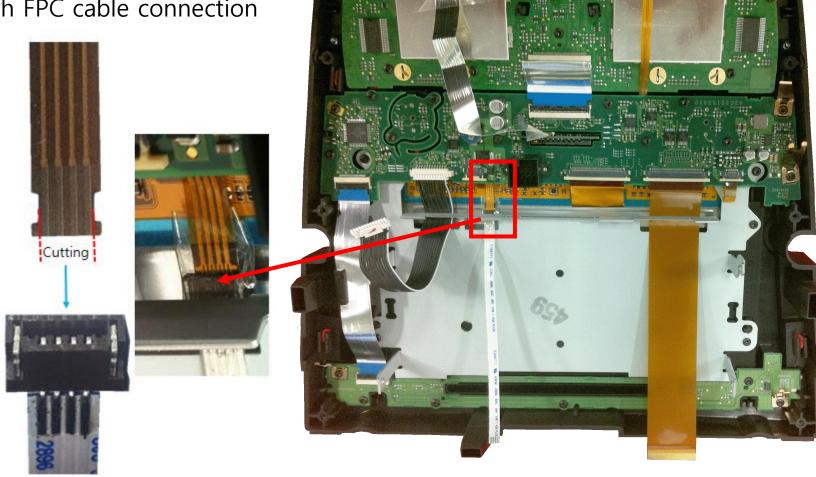


#### 1-5 Touch FPC cable connection

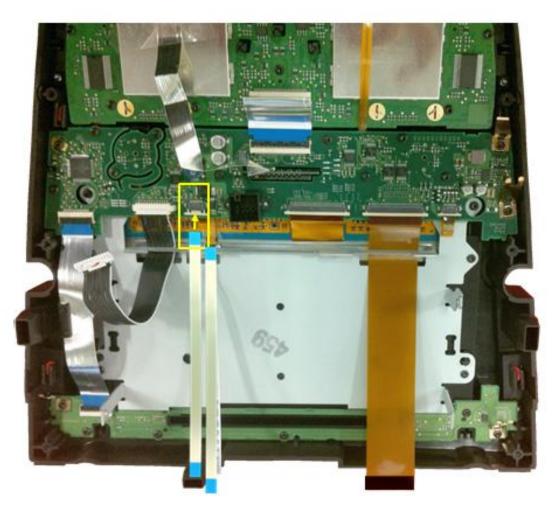

#### 1-6 Sub board Install

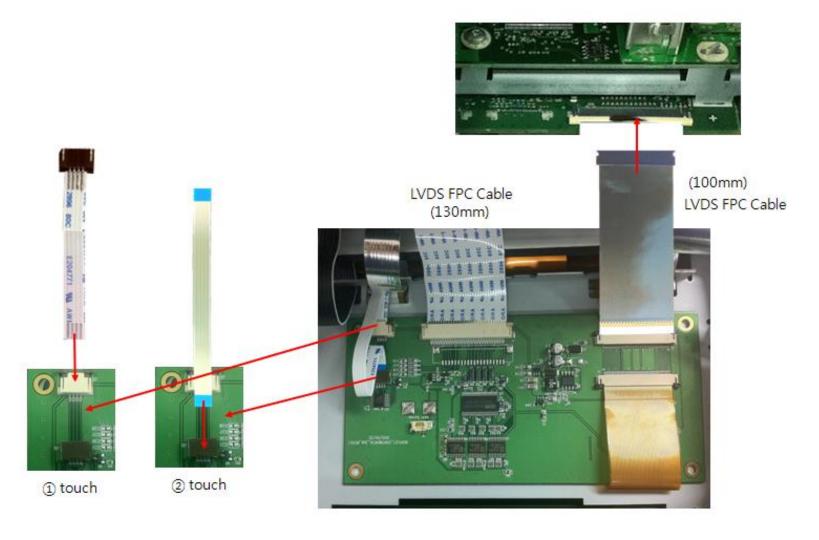

### 1-7 Jig board Install

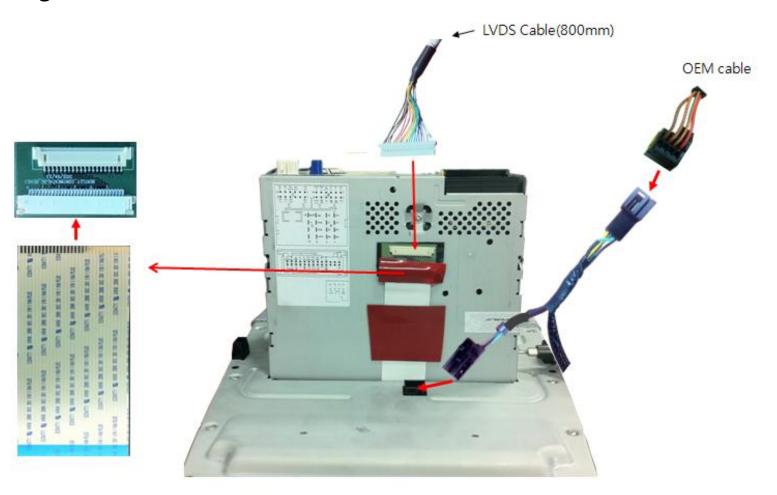

#### **FAQ**

- 1. If Interface has a problem, Please check LED.
- After acc turn on, If Interface does not have a problem; GREEN LED is blinking every 1 sec.
- RED LED is turn on (not blinking), Interface has a problem.
- **RED** LED is not turning on, there is no input device.
- RED LED and GREEN LED both are not turn on, check to power cable.
  - 2. When monitor changed to Orange color.
- LVDS cable contact problem or cable problem.
  - 3. When DTV or DVD mode, cannot control with I-Drive
- Check IR cable, and DTV or DVD device's ground cable and Interface ground cable join together with using extra cable.
- Check device in OSD menu



4. Mode change: USE MODE S/W