


MIB A3 & GOLF 7 Rearview Interface Installation Guide

Wiring diagram:

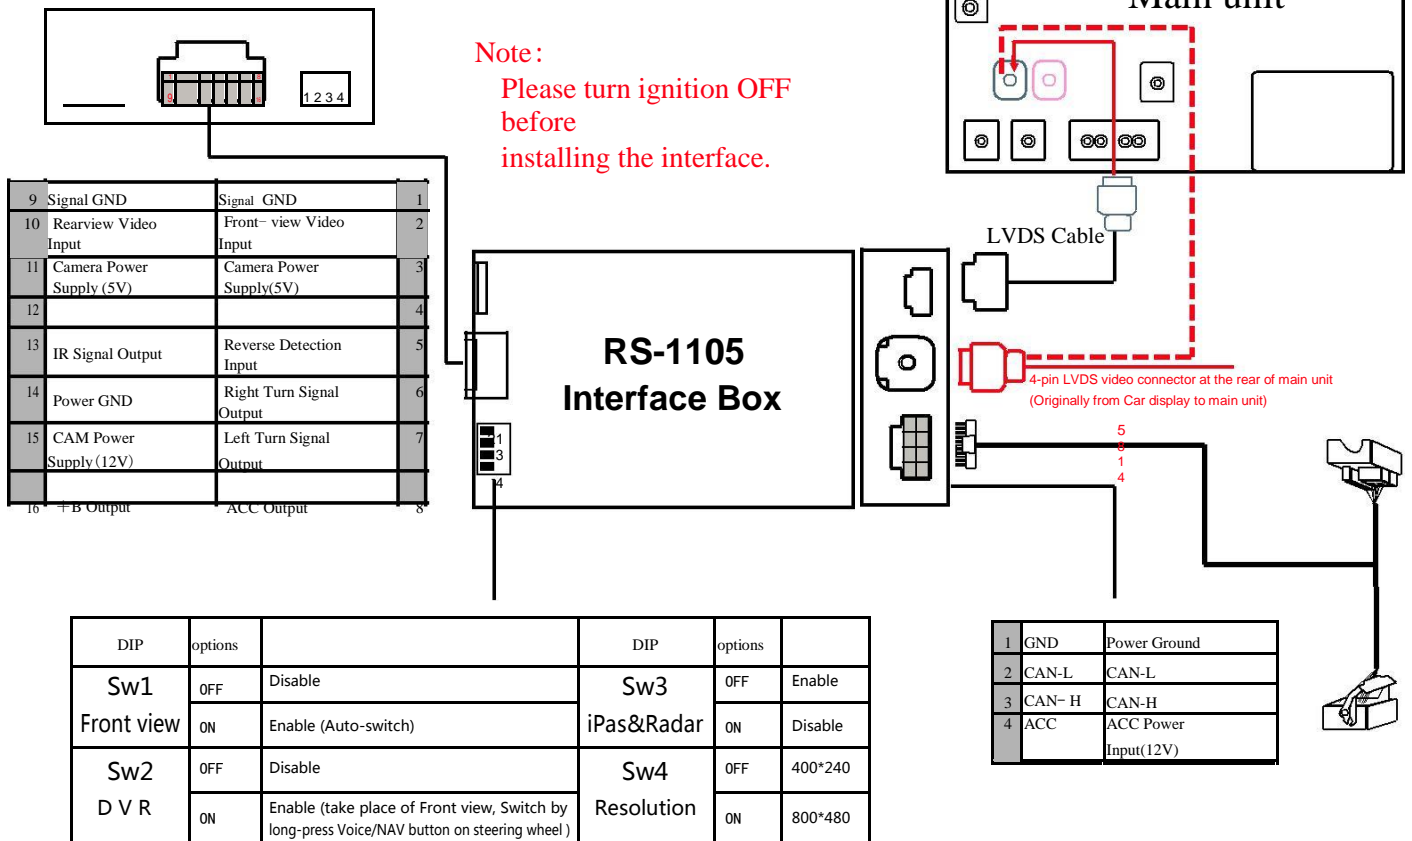

MIB A3 & GOLF 7 Rearview Interface Installation Guide

Model : RS-1105

Notice:

1. Keep flameout & unplug car key before installation
2. Please make sure this interface matches with your car model

Step 1. MIB main unit





Use trim removal tools to take out of radio NTG5 main unit. (Position may be different based on car models.)

Step 2. 40 way Quadlock connector - CANBUS & Interface Power




Plug&Play 40 way Quadlock connector :
 Un-plug original connector at the rear of radio main unit, and connect it to interface harness connector;
 connect the other end connector of interface harness to take its original place.

Step 3. Video 4-Pin LVDS

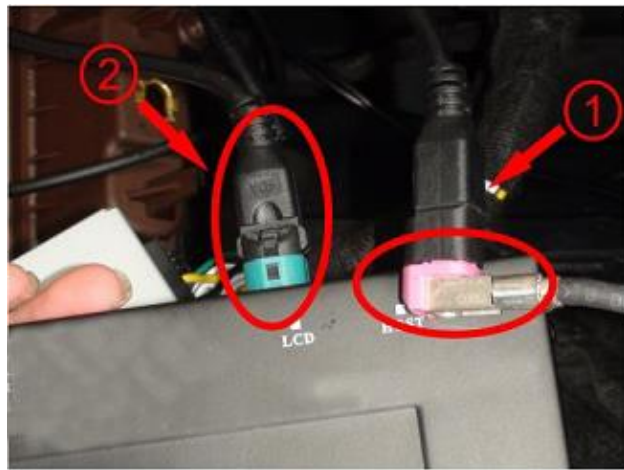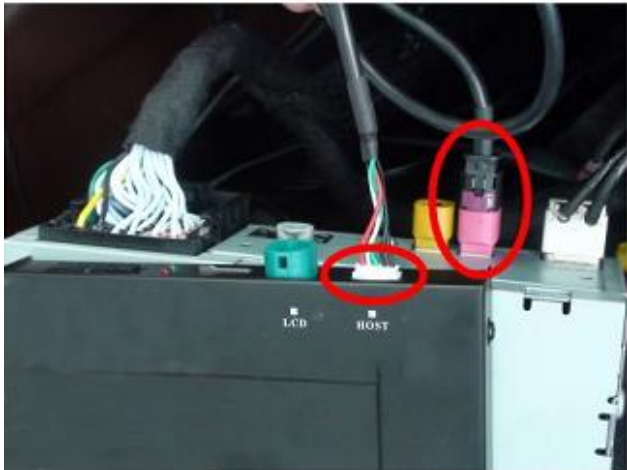


Unplug 4-pin LVDS connector (video connector, comes from Monitor to radio main unit. PS: position must be the back of radio main unit.);
 Connect it to corresponding position on Interface, and LVDS harness of Interface to take its place.

FYI:

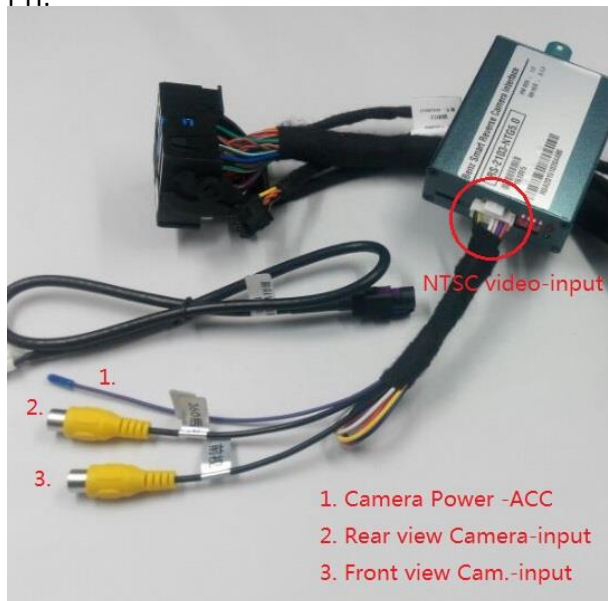





1. Open car glove-box, and take out of inside main unit with special removal kits.

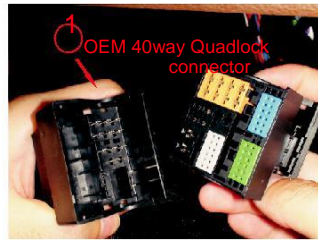

2. Plug out of car original 40 way Quadlock connector, Plug&Play into Interface Quadlock connector 1 .

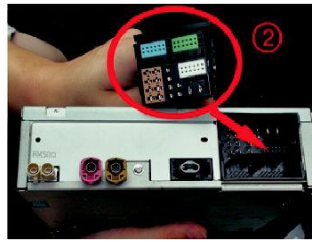

3. Connect the other end of interface Quadlock 2 to the back of main unit, take place of original connector.

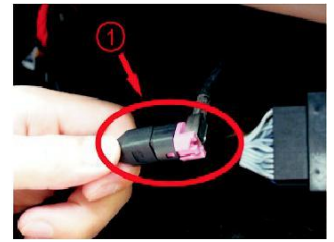

4. Take out of pink LVDS video connector at the rear of main unit, and connect it to Interface.



5. Position 1 in pic. should be connected to Position 2 (LVDS video input of Interface).



6. Connect LVDS video cable of interface to car original LVDS position at the rear of main unit.



7. Users can fasten interface inside Glove box when take it out of the car.



8. Performance of interface. (Displayed when shift into Reverse gear)